

Fittings and Tubing

Medium Pressure Cone & Thread

Pressures to 20,000 psi (1379 bar) Includes Check Valves, Filters & Couplings



Principle of Operation:


Parker Autoclave Engineers Medium Pressure Cone and Thread connections were created for those applications that require higher flow rate capability. Designed for a maximum of 20,000 psi MAWP using high tensile strength cold worked 316 Stainless Steel material as standard. In addition we offer even larger ID tubing de-rated to 15,000 psi for maximum flow rate capability. This Medium Pressure series has all the benefits of the High-Pressure version with all metal sealing, temperature ranges from -423° to 1200°F (-252° to 650°C), and includes many different material options like 2507 Super Duplex, Hastelloy C276, 6Mo (25-4SMO), and Inconel 625 to mention just a few.

Fittings and tubing found in this section are designed using ASME B31.3 Chapter IX standards to be compatible with our 15SM & 20SM, 20DBNV, 20DV Needle Valves, and all of our various ball valve configurations including Subsea. There is a Parker Instrumentation fitting for just about any application of fluids under extreme pressure and/or temperature condition.

Medium Pressure Fittings and Tubing Features:

- Utilize "SF" Style High Flow Medium Pressure Coned-and-Threaded connections (see Tools and Installation for typical port dimensions)
- Available sizes are 1/4", 3/8", 9/16", 3/4", 1" and 1-1/2"
- Standard Fitting Material is UNS S31600 with Tubing manufactured using UNS S31600/S31603, 316/316L stainless steel material, cold worked to Parker Autoclave proprietary standards
- Operating Temperatures from -423° to 1200°F (-252° to 650°C)
- Anti-vibration connection components available, see page 15
- Special materials available when corrosion, temperature, or NACE/ISO 15156 requirements demand. (See Technical Catalog)

All Parker Autoclave Engineers fittings are marked with manufacturers name, part number, material, heat code and maximum pressure for complete traceability.

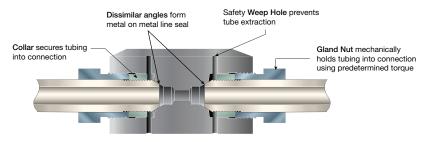

Medium Pressure "Slimline" Design Collar in front of gland, keeping port size and fitting width to minimum





ENGINEERING YOUR SUCCESS.



Fittings

Medium Pressure Fittings - Pressures to 20,000 psi (1379 bar)




Parker Autoclave Engineers Medium Pressure fittings, nicknamed "Slimline SF", are designed for use with SM Series valves and Parker Autoclave Engineers' Medium Pressure tubing. They incorporate conedand-threaded connections with the orifice sized to match the high-flow 15,000 psi tubing options shown later in this brochure. For instructions on how to make this Medium Pressure Cone & Thread connection and the tools necessary to accomplish, see our "Tools and Installation" brochure.

(See "Technical Brochure" for Pressure/Temperature effect on temperatures above ambient.)

Connection Components:

All valves and fittings are supplied complete with appropriate gland and tubing collar. To order these components separately, use part numbers listed below. When using plug, collar is not required. Tubing Pressure Caps can be found in Adapter brochure.



Add tube size code ()

1/4" - 40

3/8" - 60

9/16" - 90


3/4" - 120 1" - 160

1-1/2" - 240

Example: 1/4" Gland - CGLX40

All Cone and Thread ports MUST utilize weep holes for safety. When weep hole is not available, we offer a gland nut with a "Slotted Male Thread" that provides this safety feature without the need for the separate port. Use suffix **-SMT** with Gland part number when needed.





To ensure proper fit use Parker Autoclave Engineers tubing.

Special Materials:

Note: Special Material Fittings are supplied with CW 316 SS Glands and Collars as these parts do not touch flowing (wetted) media. To match the same material as selected for body, use either "-SOG" (Sour Oil or Gas - NACE) or "-AP" ("All Parts" (does not get hardness check typical of -SOG option)) suffix. Special material glands and adapter bodies are normally supplied with four flats (square) in place of standard hex. Include option suffix "-H" if hex is required.

For gland nut hex sizes and torque values, see "Tools and Installation" brochure. (See "Special Materials" torque chart for all materials other than CW 316 SS). *To order Antivibration Gland Fitting see page 15

NACE/ISO 15156 Compatibility

All PAE Medium Pressure Fittings and Tubing can be made with materials suitable for NACE/ISO 15156 requirements. As per NACE and ISO-15156, it is contingent on the end user to select this material. As this compatibility limits the use of "cold worked" materials, most of the choices except for 2507 Super Duplex come with significant pressure reductions. Please consult our Technical Brochure where we identify the more popular annealed materials along with the pressure reduction. Our Sour Oil and Gas brochure has a more complete description of the available options for pressures up to 30,000 psi.

NACE Suffix adder options:

"-SOG" suffix converts all pressure containing parts from cold worked 3166 SS to annealed condition material, requires hardness check, and NACE certificate is generated for each part. Pressure reductions of 60% (8,000 psi)are possible. Contact factory for other pressure/material options.

-SOG10" suffix is the same as above but generates a part with thicker body capable of 10,000 psi MAWP (Used only with 316/316L Material)

---**-**Parker

Autoclave Engineers



90° Elbow: 45° Elbows are available, replace 00 with 45 (ie; CLX6645 or CLX1645)

Catalog	Connec-	Outside	Pressure	Orifice		Din	nensions -	inches (m	ım)		Block
Number	tion Type	Diameter Tube	Rating psi (bar)*	inches (mm)	А	В	С	D Typical	Е	F	Thickness
										ı	
CLX4400	SF250CX	1/4	20,000	.125	1.12	1.50	0.38	0.50	0.75	0.75	0.62
	(1/4" MP)	(6.35)	(1379)	(3.18)	(28.45)	(38.10)	(9.53)	(13)	(19.05)	(19.05)	(15.75)
CLX6600	SF375CX	3/8	20,000	.219	1.38	2.00	0.44	0.62	1.00	1.00	0.75
	(3/8" MP)	(9.53)	(1379)	(5.56)	(35.05)	(50.80)	(11.18)	(16)	(25.40)	(25.40)	(19.05)
CLX9900	SF562CX	9/16	20,000	.359	1.75	2.50	0.53	0.94	1.25	1.25	1.00
	(9/16" MP)	(14.29)	(1379)	(9.12)	(44.45)	(63.50)	(13.46)	(24)	(31.75)	(31.75)	(25.40)
CLX12	SF750CX	3/4	20,000	.516	2.25	3.00	0.62	1.19	1.50	1.50	1.38
	(3/4" MP)	(19.05)	(1379)	(13.11)	(57.15)	(76.20)	(15.75)	(30)	(38.10)	(38.10)	(34.93)
CLX16	SF1000CX	1	20,000	.688	3.00	4.12	0.72	1.38	2.06	2.06	1.75
	(1" MP)	(25.40)	(1379)	(17.48)	(76.20)	(104.65)	(18.29)	(35)	(52.32)	(52.32)	(44.45)
CLX24	SF1500CX	1-1/2	15,000	.938	4.00	5.75	1.12	1.88	2.88	2.88	2.25
	(1-1/2" MP)	(38.10)	(1034)	(23.80)	(101.60)	(146.05)	(28.45)	(48)	(73.03)	(73.03)	(57.15)
(1-1/2" MP) (38.10) (1034) (23.80) (101.60)							it. Actual we ating, if low- ions for refet t service, P Consult you ing hole op- mounting h	orking presser. erence only arker Autoc ir local repretion add suf-	fix -PM to co	determined to change. ers stocks so atalog numbers atalog numbers at the control of the control	by tubing elect per. Consult rque
	Elbow						nts please s	ee "Iools a	nd Installatio	on" brochure	ð.

Conversion Adapters can be found in our "Adapter" brochure found further in main catalog or on our website.

Tee

Catalog	Connection	Outside	Pressure	Orifice		Dimensions - inches (mm)					
Number	Type	Diameter Tube	Rating psi (bar)*	inches (mm)	А	В	С	D Typical	Е	F	Block Thickness
CTX4440	SF250CX	1/4	20,000	.125	1.12	1.50	0.38	0.50	0.75	0.75	0.62
	(1/4" MP)	(6.35)	(1379)	(3.18)	(28.45)	(38.10)	(9.53)	(13)	(19.05)	(19.05)	(15.75)
CTX6660	SF375CX	3/8	20,000	.219	1.38	2.00	0.44	0.62	1.00	1.00	0.75
	(3/8" MP)	(9.53)	(1379)	(5.56)	(35.05)	(50.80)	(11.18)	(16)	(25.40)	(25.40)	(19.05)
CTX9990	SF562CX	9/16	20,000	.359	1.75	2.50	0.53	0.94	1.25	1.25	1.00
	(9/16" MP)	(14.29)	(1379)	(9.12)	(44.45)	(63.50)	(13.46)	(24)	(31.75)	(31.75)	(25.40)
CTX12	SF750CX	3/4	20,000	.516	2.25	3.00	0.62	1.19	1.50	1.50	1.38
	(3/4" MP)	(19.05)	(1379)	(13.11)	(57.15)	(76.20)	(15.75)	(30)	(38.10)	(38.10)	(34.93)
CTX16	SF1000CX	1	20,000	.688	3.00	4.12	0.72	1.38	2.06	2.06	1.75
	(1" MP)	(25.40)	(1379)	(17.48)	(76.20)	(104.65)	(18.29)	(35)	(52.32)	(52.32)	(44.45)
CTX24	SF1500CX	1-1/2	15,000	.938	4.00	5.75	1.12	1.88	2.88	2.88	2.25
	(1-1/2" MP)	(38.10)	(1034)	(23.80)	(101.60)	(146.05)	(28.45)	(48)	(73.03)	(73.03)	(57.15)
(1-1/2" MP) (38.10) (1034) (23.80) (101.60							rking pressu I dimension ing hole op mounting has of same wn in drawir d 9/16" MP	ure may be a s for referention add sufficient add sufficient stype, changing, ie: CTX9 runs. For C	determined note only and fifix -PM to display to ordinate part numling 1290 would connection 1	d subject to catalog num der Tee with ber size cod d build Tee w Forque requi	ressure rating, change. ber. Consult different size es using vith 3/4" MP
	Tee						e "Tools and	I Installation	" brochure.		

Conversion Adapters can be found in our "Adapter" brochure found further in main catalog or on our website.





Cross

Catalog	Connection	Outside	Pressure	Orifice		[Dimensions -	· inches (mm	1)		Block
Number	Type	Diameter Tube	Rating psi (bar)*	inches (mm)	А	В	С	D Typical	Е	F	Thick- ness
			I								
CXX4444	SF250CX	1/4	20,000	.125	1.50	1.50	0.38	0.50	0.75	0.75	0.62
	(1/4" MP)	(6.35)	(1379)	(3.18)	(38.10)	(38.10)	(9.53)	(13)	(19.05)	(19.05)	(15.75)
CXX6666	SF375CX	3/8	20,000	.219	2.00	2.00	0.44	0.62	1.00	1.00	0.75
	(3/8" MP)	(9.53)	(1379)	(5.56)	(50.80)	(50.80)	(11.18)	(16)	(25.40)	(25.40)	(19.05)
CXX9999	SF562CX	9/16	20,000	.359	2.50	2.50	0.53	0.94	1.25	1.25	1.00
	(9/16" MP)	(14.29)	(1379)	(9.12)	(63.50)	(63.50)	(13.46)	(24)	(31.75)	(31.75)	(25.40)
CXX12	SF750CX	3/4	20,000	.516	3.00	3.00	0.62	1.19	1.50	1.50	1.38
	(3/4" MP)	(19.05)	(1379)	(13.11)	(76.20)	(76.20)	(15.75)	(30)	(38.10)	(38.10)	(34.93)
CXX16	SF1000CX	1	20,000	.688	4.12	4.12	0.72	1.38	2.06	2.06	1.75
	(1" MP)	(25.40)	(1379)	(17.48)	(104.65)	(104.65)	(18.29)	(35)	(52.32)	(52.32)	(44.45)
CXX24	SF1500CX	1-1/2	15,000	.938	5.75	5.75	1.12	1.88	2.88	2.88	2.25
	(1-1/2" MP)	(38.10)	(1034)	(23.80)	(146.05)	(146.05)	(28.45)	(48)	(73.03)	(73.03)	(57.15)
	1	F O	C -PM Option	Actual worki All dimension For prompt s Consult your For mounting for mounting same type, c ie: CXX6969	oressure rating ng pressure rating ng pressure rans for reference service, Parket r local represe g hole option is hole dimensishange part nu would build a Torque require	nay be determine only and suiter Autoclave Entertainte. and suffix -PW ons. To order (aumber size cool. Cross with 9/	ined by tubing bject to chang agineers stock of the catalog nu Cross with diffuse using order 16" MP altern	g pressure ratinge. s select productions select productions consulting ferent size corer shown in drating with 3/8	ng, if lower. Icts. It factory Innections of awing, " MP. For		
	Cross										

Conversion Adapters can be found in our "Adapter" brochure found further in main catalog or on our website.

Bulkhead Coupling

Catalog	Connection	Outside	Pressure	Orifice			Dimens	ions - inche	es (mm)		
Number	Type	Diameter Tube	Rating psi (bar)*	inches (mm)	А	В	С	D Typical	Е	F	G Thickness
	ı										
20BFX4466	SF250CX	1/4	20,000	.125	0.81	1.88	0.38	0.50	0.53	1.00	0.38
	(1/4" MP)	(6.35)	(1379)	(3.18)	(20.57)	(47.75)	(9.53)	(13)	(13.46)	(25.40)	(9.53)
20BFX6666	SF375CX	3/8	20,000	.219	0.94	2.00	0.44	0.62	0.62	1.00	0.38
	(3/8" MP)	(9.53)	(1379)	(5.56)	(23.88)	(50.80)	(11.18)	(16)	(15.75)	(25.40)	(9.53)
20BFX9966	SF562CX	9/16	20,000	.359	1.12	2.38	0.53	0.94	0.78	1.38	0.38
	(9/16" MP)	(14.29)	(1379)	(9.12)	(28.45)	(60.45)	(13.46)	(24)	(19.81)	(35.05)	(9.53)
20BFX12	SF750CX	3/4	20,000	.516	1.69	2.62	0.62	1.19	0.91	1.88	0.38
	(3/4" MP)	(19.05)	(1379)	(13.11)	(42.93)	(66.55)	(15.75)	(30)	(23.11)	(47.75)	(9.53)
20BFX16	SF1000CX	1	20,000	.688	1.94	3.50	0.72	1.38	1.50	1.88+	0.38
	(1" MP)	(25.40)	(1379)	(17.48)	(49.28)	(88.90)	(18.29)	(35)	(38.10)	(47.75)	(9.53)
15BFX24	SF1500CX	1-1/2	15,000	.938	2.44	5.00	1.12	1.88	2.00	2.50+	0.38
	(1-1/2" MP)	(38.10)	(1034)	(23.80)	(61.85)	(127.00)	(28.45)	(48)	(50.80)	(63.50)	(9.53)
	F HEX	G MA	A = Panel I			Actual work if lower. + distance a All dimension Torque requestror prompt	ons for referentirements pleaservice, Park	may be determined only and ase see "Tool er Autoclave"	rmined by tub subject to ch s and Installa	oing pressure ange. For Co	erating,
	Bulkhead Coupling							Consult your local representative.			

Conversion Adapters can be found in our "Adapter" brochure found further in main catalog or on our website.




Straight Coupling / Union Coupling

Catalan	Connection	Outside	Pressure	Orifice		Dimensions	- inches (mn	า	Counting
Catalog Number	Connection Type	Diameter Tube	Rating psi (bar)*	inches (mm)	А	В	С	D Typical	Coupling Type
			I						
20FX4466	SF250CX	1/4	20,000	.125	0.62	1.62	0.38	0.50	Straight
20UFX4466	(1/4" MP)	(6.35)	(1379)	(3.18)	(15.75)	(41.15)	(9.53)	(130)	Union
20FX6666	SF375CX	3/8	20,000	.219	0.75	1.75	0.44	0.62	Straight
20UFX6666	(3/8" MP)	(9.53)	(1379)	(5.56)	(19.05)	(44.45)	(11.18)	(16)	Union
20FX9966	SF562CX	9/16	20,000	.359	1.13	2.12	0.53	0.94	Straight
20UFX9966	(9/16" MP)	(14.29)	(1379)	(9.12)	(28.70)	(53.85)	(13.46)	(24)	Union
20FX12	SF750CX	3/4	20,000	.516	1.38	2.50	0.62	1.19	Straight
20UFX12	(3/4" MP)	(19.05)	(1379)	(13.11)	(35.05)	(63.50)	(15.75)	(30)	Union
20FX16	SF1000CX	1	20,000	.688	1.75	3.50	0.72	1.38	Straight
20UFX16	(1" MP)	(25.40)	(1379)	(17.48)	(44.45)	(88.90)	(18.29)	(35)	Union
15FX24	SF1500CX	1-1/2	15,000	.938	2.25	5.00	1.12	1.88	Straight
15UFX24	(1-1/2" MP)	(38.10)	(1034)	(23.80)	(25.15)	(127.00)	(28.45)	(48)	Union
		HEX C.	D		Actual worki if lower. All dimensio For prompts Consult you	ns for referenceservice, Parke	ee only and su r Autoclave Er ntative.	ined by tubing bject to chang ngineers stock	ng of any component. pressure rating, ge. s select products. s and Installation"
	Straight Coupling / Union Coupling						, pic		

Conversion Adapters can be found in our "Adapter" brochure found further in main catalog or on our website.

Union Coupling Assembly

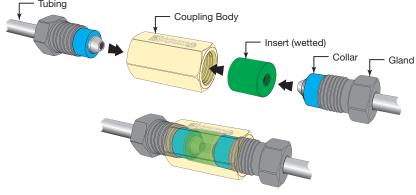

Assembled Union Coupling

Union vs. Straight Coupling Comparison

In much the same as with a traditional Pipe Union, the PAE Union Coupling is used to easily disassemble tubing runs when valves or fittings need to be replaced after original installation. The Body and Insert are two different pieces in the same assembly. The body can slide down tubing leaving only the insert and the tubing tips engaged. Then with only minimal tube shift, the insert drops out allowing the tubing to be removed avoiding the need to disassemble multiple tubing sections from closest elbow.

Note: When Special Materials are requested, the only material that is changed is the Insert (wetted). If "All Parts" are to be requested, include suffix "-AP" or "-SOG" if for NACE/ISO 15156.





Tubing

Medium Pressure Tubing - Pressures to 20,000 psi (1379 bar)



Parker Autoclave Engineers offers a complete selection of austenetic, cold drawn stainless steel tubing designed to match the performance standards of Parker Autoclave valves and fittings. Parker Autoclave Engineers medium pressure tubing is manufactured specifically for high pressure applications requiring both strength and corrosion resistance. The tubing is furnished in random lengths between 20 feet (6 meters) and 26.5 feet (8.0 meters). The average is 24 feet (7.3 meters). Medium Pressure Tubing is available in six sizes and a variety of materials. All Parker Autoclave Engineers manufactured tubing is line marked repeatedly along the full length with our name, country of origin, Heat number, PO number, tube dimensions (Nominal OD and ID), PAE Part Number, Manufacturing Specification, and Pressure Rating (MAWP @ Room Temp).

Inspection and Testing:

Parker Autoclave Engineers' medium pressure tubing is inspected to assure freedom from seams, laps, fissures or other flaws, as well as carburization or intergranular carbide precipitation. The outside and inside diameters of the tubing are subject to special inspection and are controlled within close tolerences to assure proper fit. Sample pieces of tube for each lot are tested to confirm mechanical properties. Hydrostatic testing is also performed on a statistical basis and is conducted at the working pressure of the tube. Parker Autoclave will perform 100% hydrostatic testing at additional cost if desired.

Special Material:

In addition to the most commonly requested tubing materials CW 316 SS, 2507 Super Duplex*, and Inconel 625* (specifications on next page), we have other options outlined in our Technical brochure. These include NACE/ ISO 15156 capable materials for a variety of corrosive applications.

(See "Technical Brochure" for Pressure/Temperature effect on temperatures above ambient.)

Note: * Trademark names, Please consult factory for stock availabilty.

Tubing Tolerance:

Parker Autoclave Engineers tubing is made to specifications that exceed all others as part of a complete "system" of products that have your safety always in mind. The outside dimension of this tubing is intentionally "undersized" to match the requirements of the threading die used to put the connection thread on the tubing. See actual dimensions and tolerancing below:

Nominal Tubing Size inches (mm)	Tolerance/Outside Diameter inches (mm)
1/4 (6.35)	.248/.243 (6.30/6.17)
3/8 (9.53)	.370/.365 (9.40/9.27)
9/16 (14.27)	.557/.552 (14.15/14.02)
3/4 (19.05)	.745/.740 (18.92/18.80)
1 (25.40)	.995/.990 (25.27/25.14)
1-1/2 (38.10)	1.495/1.490 (37.98/37.85)

Note:

Standard Tubing is manufactured in accordance with ASME B31.3 Chapter IX standards using UNS S31600/S31603, 316/316L Stainless Steel material, cold worked to Parker Autoclave proprietary standards.

Tubing outside diameter dimensions do not meet standard commercial tubing tolerances. Tubing outside dimensions are specifically chosen to meet tube threading die requirements.

Parker Autoclave Engineers components and tubing are designed as a "complete system" for safety and our fittings will not be compatible with standard "commercial" tubing.



Tubing Details: 316/316L, UNS S31600/S31603 Stainless Steel (Cold Worked)

Catalog	Tube	Fits Connection		Tube Size inches (mm)		Flow Area	Working Pressure psi (bar)*				
Number	Material	Type	Outside Diameter	Inside Diameter	Wall Thickness	in² (mm²)	-423 to 100°F (-252 to 38°C)	200°F (93°C)	400°F (204°C)	600°F (316°C)	
MS15-092	316SS	SF250CX	1/4 (6.35)	0.109 (2.77)	.070 (1.78)	0.009 (5.81)	20,000 (1379)	20,000 (1379)	19,000 (1310)	18,000 (1241)	
MS15-093	316SS	SF375CX	3/8 (9.53)	0.203 (6.16)	.086 (2.18)	0.032 (20.66)	20,000 (1379)	20,000 (1379)	19,000 (1310)	18,000 (1241)	
MS15-097	316SS	SF562CX	9/16	0.359 (9.12)	.101 (2.57)	.101 (65.16)	15,000 (1034)	15,000 (1034)	14,200 (979)	13,500 (931)	
MS15-085	316SS	5F362UX	(14.29)	0.312 (7.92)	.125 (3.18)	.076 (49.03)	20,000 (1379)	20,000 (1379)	19,000 (1310)	18,000 (1241)	
MS15-098	316SS	SF750CX	3/4	0.516 (13.11)	.117 (2.97)	.209 (134.84)	15,000 (1034)	15,000 (1034)	14,200 (979)	13,500 (931)	
MS15-095	316SS	5F/50CX	(19.06)	0.438 (11.13)	.156 (3.96)	0.151 (97.42)	20,000 (1379)	20,000 (1379)	19,000 (1310)	18,000 (1241)	
MS15-099	316SS	SF1000CX	1	0.688 (17.48)	.156 (3.96)	.371 (239.36)	15,000 (1034)	15,000 (1034)	14,200 (979)	13,500 (931)	
MS15-096	316SS	3F1000CX	(25.40)	0.556 (14.27)	.219 (6.66)	0.248 (160.00)	20,000 (1379)	20,000 (1379)	19,000 (1310)	18,000 (1241)	
13041	316SS	SF1500CX	1-1/2 (38.10)	0.937 (23.80)	0.281 (7.14)	0.689 (444.88)	15,000 (1034)	15,000 (1034)	14,200 (979)	13,500 (931)	

Tubing Details: 2507 Super Duplex, UNS S32750 (Annealed - meets NACE/ISO 15156 & NORSOK M650, must use -S06 suffix for NACE conformance certificate

Catalog	Tube	Fits	Connection Flow Are		Flow Area	Working Pressure psi (bar)*				
Number	Material	Type	Outside Diameter	Inside Diameter	Wall Thickness	in² (mm²)	-50° to 100°F (-45° to 38°C)	200°F (93°C)	400°F (204°C)	600°F (316°C)
MS15-503	2507	SF250CX	1/4 (6.35)	0.109 (2.77)	.070 (1.78)	0.009 (5.81)	20,000 (1379)	17,500 (1207)	15,200 (1048)	14,400 (993)
MS15-504	2507	SF375CX	3/8 (9.53)	0.203 (6.16)	.086 (2.18)	0.032 (20.66)	20,000 (1379)	17,500 (1207)	15,200 (1048)	14,400 (993)
MS15-500	2507	SF562CX	9/16	0.359 (9.12)	.101 (2.57)	0.101 (65.16)	15,000 (1034)	13,200 (910)	11,400 (786.0)	10,500 (724.05)
MS15-505	2507	3F302CX	(14.29)	0.312 (7.92)	.125 (3.18)	0.076 (49.03)	20,000 (1379)	17,500 (1207)	15,200 (1048)	14,400 (993)
MS15-501	2507	SF750CX	3/4	0.516 (13.11)	0.017 (2.97)	0.209 (134.84)	15,000 (1034)	13,200 (910)	11,400 (786.0)	10,500 (724.05)
MS15-506	2507	3F/30CX	(19.06)	0.438 (11.13)	0.156 (3.96)	0.151 (97.42)	20,000 (1379)	17,500 (1207)	15,200 (1048)	14,400 (993)
MS15-502	2507	SF1000CX	1	0.688 (17.48)	0.156 (3.96)	0.371 (239.36)	15,000 (1034)	13,200 (910)	11,400 (786.0)	10,500 (724.05)
MS15-507	2507	3F1000CX	(25.40)	0.562 (14.27)	0.219 (5.56)	0.248 (160.00)	20,000 (1379)	17,500 (1207)	15,200 (1048)	14,400 (993)
MS15-509	2507	SF1500CX	1-1/2 (38.10)	0.937 (23.79)	.281 (7.13)	0.689 (444.88)	15,000 (1034)	13,200 (910)	11,400 (786.0)	10,500 (724.05)

Tubing Details: Inconel 625®, UNS N06625 (Annealed - meets NACE/ISO 15156, must use -S06 suffix for NACE conformance certificate

Catalog	Catalog lube Conn	Fits Connection				Flow Area	Working Pressure psi (bar)*				
Number	Material	Type	Outside Diameter	Inside Diameter	Wall Thickness	in² (mm²)	-423 to 100°F (-252 to 38°C)	200°F (93°C)	400°F (204°C)	600°F (316°C)	
13234	IN625	SF250CX	1/4 (6.35)	0.109 (2.77)	.070 (1.78)	0.009 (5.81)	15,000 (1034)	14,100 (972)	13,600 (938)	12,800 (883)	
13062	IN625	SF375CX	3/8 (9.53)	0.203 (6.16)	.086 (2.18)	0.032 (20.66)	15,000 (1034)	14,100 (972)	13,600 (938)	12,800 (883)	
13233	IN625	SF562CX	9/16 (14.29)	0.312 (7.92)	.125 (3.18)	0.076 (49.03)	15,000 (1034)	14,100 (972)	13,600 (938)	12,800 (883)	
13232	IN625	SF750CX	3/4 (19.06)	0.438 (11.13)	0.156 (3.96)	0.151 (97.42)	15,000 (1034)	14,100 (972)	13,600 (938)	12,800 (883)	
13231	IN625	SF1000CX	1 (25.40)	0.562 (14.28)	0.219 (5.56)	0.248 (160.00)	15,000 (1034)	14,100 (972)	13,600 (938)	12,800 (883)	

Caution should be exercised in proper selection of Medium Pressure Tubing based on actual operating conditions. Two series available with some sizes: 15,000 psi (1034 bar) and 20,000 psi (1379 bar).

*Maximum pressure rating is based on the lowest rating of any component. Actual working pressure may be determined by tubing pressure rating, if lower.

See Technical Section for Temperature Ratings over 600°F (315°C)

All dimensions for reference only and subject to change. For prompt service, Parker Autoclave Engineers stocks select products. Consult your local representative.



Coned-and-Threaded Nipples

Medium Pressure - Pressures to 20,000 psi (1379 bar)



For rapid system make-up, Parker Autoclave Engineers supplies pre-cut, coned-andthreaded nipples in various sizes and lengths for Parker Autoclave Engineers Medium Pressure valves and fittings.

Special Lengths:

In addition to the standard lengths listed in the table below, nipples are available in any custom length up to total stick length. Consult factory.

Material:

Catalog numbers in table refer to Type UNS S31600/ S31603, CW 316/316L Stainless steel. Optional materials available. When changing material selection, replace -316 with replacement material suffix (-2507 for 2507 Super Duplex, -IN625 for Inconel 625). Consult Techncial Brochure for additional material options.

(See "Technical Brochure" for Pressure/Temperature effect on temperatures above ambient.)

Nipple Details:

			Catalo	g Number (3	16 Stainless	Steel)			
Tube Size				F	its Connectio	n Type			
inches (mm)	SF250CX	SF375CX	SF562CX	SF562CX	SF750CX	SF750CX	SF1000CX	SF10000CX	SF1500CX
Outside Diam-	1/4	3/8	9/16	9/16	3/4	3/4	1	1	1-1/2
eter	(6.35)	(9.53)	(14.29)	(14.29)	(19.05)	(19.05)	(25.40)	(25.40)	(38.10)
Inside Diameter	.109	.203	.359	.312	.516	.438	.688	.562	.937
	(2.77)	(5.16)	(9.12)	(7.92)	(13.11)	(11.13)	(17.48)	(14.27)	(23.79)
Working Pressure at 100°F (38°C) psi (bar)*	20,000 (1379)	20,000 (1379)	15,000 (1034)	20,000 (1379)	15,000 (1034)	20,000 (1379)	15,000 (1034)	20,000 (1379)	15,000 (1034)
Nipple Length inches (mm)		1	1		1	1			
2.75" (69.85)	CNX4402 -316								
3.00" (76.20)	CNX4403 -316	CNX6603 -316							
4.00" (101.60)	CNX4404 -316	CNX6604 -316	CNLX9904 -316	CNX9904 -316	CNLX1204 -316	CNX1204 -316			
6.00"	CNX4406	CNX6606	CNLX9906	CNX9906	CNLX1206	CNX1206	CNLX1606	CNX1606	CNLX2406
(152.40)	-316	-316	-316	-316	-316	-316	-316	-316	-316
8.00"	CNX4408	CNX6608	CNLX9908	CNX9908	CNLX1208	CNX1208	CNLX1608	CNX1608	CNLX2408
(203.20)	-316	-316	-316	-316	-316	-316	-316	-316	-316
10.00"	CNX44010	CNX44010	CNLX99010	CNX99010	CNLX12010	CNX12010	CNLX16010	CNX16010	CNLX24010
(254.00)	-316	-316	-316	-316	-316	-316	-316	-316	-316
12.00"	CNX44012	CNX44012	CNLX99012	CNX99012	CNLX12012	CNX12012	CNLX16012	CNX16012	CNLX24012
(304.80)	-316	-316	-316	-316	-316	-316	-316	-316	-316
14.00"	CNX44014	CNX44014	CNLX99014	CNX99014	CNLX12014	CNX12014	CNLX16014	CNX16014	CNLX24014
(355.60)	-316	-316	-316	-316	-316	-316	-316	-316	-316
16.00"	CNX44016	CNX44016	CNLX99016	CNX99016	CNLX12016	CNX12016	CNLX16016	CNX16016	CNLX24016
(406.40)	-316	-316	-316	-316	-316	-316	-316	-316	-316
18.00"	CNX44018	CNX44018	CNLX99018	CNX99018	CNLX12018	CNX12018	CNLX16018	CNX16018	CNLX24018
(457.20)	-316	-316	-316	-316	-316	-316	-316	-316	-316
20.00"	CNX44020	CNX44020	CNLX99020	CNX99020	CNLX12020	CNX12020	CNLX16020	CNX16020	CNLX24020
(508.00)	-316	-316	-316	-316	-316	-316	-316	-316	-316
22.00"	CNX44022	CNX44022	CNLX99022	CNX99022	CNLX12022	CNX12022	CNLX16022	CNX16022	CNLX24022
(558.80)	-316	-316	-316	-316	-316	-316	-316	-316	-316
24.00"	CNX44024	CNX44024	CNLX99024	CNX99024	CNLX12024	CNX12024	CNLX16024	CNX16024	CNLX24024
(609.60)	-316	-316	-316	-316	-316	-316	-316	-316	-316

Notes:

Caution should be exercised when selecting medium pressure nipples since two series are available: 15,000 psi (1034 bar) and 20,000 psi (1379 bar)

See medium pressure tubing section for pressures at various temperatures.

*Maximum pressure rating is based on the lowest rating of any component. Actual working pressure may be determined by tubing pressure rating, if lower.


All dimensions for reference only and subject to change.

For Connection Torque requirements please see "Tools and Installation" brochure



Check Valves

Medium Pressure - Pressures to 20,000 psi (1379 bar)



CXO Series O-Ring Check Valve

Ordering part numbers can be found on page 12

Provide unidirectional flow and tight shut-off for liquids and gases with high reliability. When differential drops below cracking pressure*, valve shuts off. (Not for use as relief valve.)

Cracking Pressure:

20 psi (1.38 bar) ±30%. Springs for higher cracking pressures up to 100 psi available on special order for O-ring style check valves only.

Temperature Range/O-ring Options:

Viton (FKM) O-ring (std.): 0° to 400°F (-18° to 204°C) Buna-N O-ring (**-BO** suffix): -20° to 250°F (-29° to 121°C) FFKM O-ring (-**KO** suffix): 0° to 500°F *(-18° to 260°C) PTFE O-ring (**-TO** suffix): -100° to 400°F (-73° to 204°C) PTFE O-ring with Low Temp Spring (-LTTO suffix): to -423°F (-252°C)

(See "Technical Brochure" for Pressure/Temperature effect on temperatures above ambient.)

Installation:

Vertical or Horizontal as required. Flow Direction arrow on valve

CAUTION: While testing has shown O-Rings to provide satisfactory service life, both cyclic and shelf life may vary widely with differing service conditions, properties of reactants, pressure and temperature cycling and age of the O-ring. FREQUENT INSPECTIONS SHOULD BE MADE to detect any deterioration, and O-rings replaced as required.


NOTE: For optional material see Technical Brochure. Special material check valves are normally supplied with four flats in place of standard hex.

Material of Construction:

Item #	Description	Material
1	Check Valve Body	316 SS
2	Cover	316 SS
3	Poppet	316 SS
4	Gland Nut	316 SS
5	Spring	302 SS
6	O-Ring	90 Duro FKM
	Typical spare parts found in Repair Kits	

Basic O-ring Check Valve Repair Kits:


Check Valves are easily repaired. Add "R" to front of valve catalog number for proper repair kit (example: RCXO9900) See "Cover Torque" on page 12 for re-assembly. Include any catalog number suffix marked on original part when ordering repair kit.

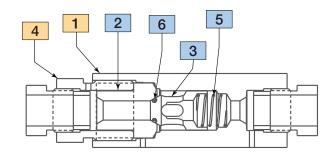



Ball Check Valves

Medium Pressure - Pressures to 20,000 psi (1379 bar)



CXB Series Ball Check Valve

Ordering part numbers can be found on page 12

Prevent reverse flow where leak-tight shut-off is not mandatory. When differential drops below cracking pressure, valve closes. With all-metal components, valve can be used up to 800°F (425°C). See Technical Information section for connection temperature limitations. (Not for use as relief valve.)

Ball and poppet are an integral design to assure positive, in-line seating without "chatter". Poppet is designed for axial flow with minimum pressure drop.

Cracking Pressure:

20 psi (1.38 bar) +/- 30% No optional cracking pressures available.

Temperature Range:

With All-Metal components, valve can be used to 800°F (425°C). Minimum standard operating temperature is -110°F (-79°C). For Low Temperature operation to -423°F (-252°C) use suffix "-LT" (Low Temp Spring)

(See "Technical Brochure" for Pressure/Temperature effect on temperatures above ambient.)

Installation:

Vertical or Horizontal as required. Flow Direction arrow on valve body

NOTE: For optional material see Technical Brochure. Special material check valves are normally supplied with four flats in place of standard hex.


Material of Construction:

Item #	Description	Material
1	Gland	316 SS
2	Gland Nut	316 SS
3	Cover	316 SS
4	Poppet	316 SS
5	Spring	302 SS
6	Check Valve Body	316 SS
	Typical spare parts found in Repair k	Cits

Basic Ball Check Valve Repair Kits:

Check Valves are easily repaired. Add "R" to front of valve catalog number for proper repair kit (example: RCXB9900) See "Cover Torque" on page 12 for re-assembly.


Include any catalog number suffix marked on original part when ordering repair kit.

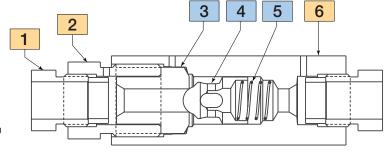



Excess Flow Valves

Medium Pressure - Pressures to 20,000 psi (1379 bar)



CXK Series Ball Type Excess Flow Valves (Surge Check)

Ordering part numbers can be found on page 12

Protects pressure gauges and pressure instrumentation from sudden surges in flow or venting in the event of line failure.

Vertical Installation: Since this type of check valve employs a non-spring loaded ball, valve MUST be installed in VERTICAL position with arrow on valve body pointing UP. (cover gland up).

Resetting Valve: Equalize the pressure across the ball. The ball will drop and reset automatically. Note: when in checked position, a small flow is permitted through the valve. See dimension chart on next page for checked flow rates).

Temperature Range:

With All-Metal components, Excess Flow Valve can be used from -423° to 800°F (-252° to 425°C).

(See "Technical Brochure" for Pressure/Temperature effect on temperatures above ambient.)


NOTE: For optional material see Needle Valve Options section. Special material check valves may be supplied with four flats in place of standard hex.

Material of Construction:

Item #	Description	Material
1	Gland Nut	316 SS
2	Cover	316 SS
3	Ball, 1/2" Diameter	302 SS
4	Sleeve	316 SS
5	Check Valve Body	316 SS
	Typical spare parts found in Repair Kits	

Excess Flow Valve Repair Kits

Excess Flow Valves are easily repaired. Add "R" to front of valve catalog number for proper repair kit (example: RCK9902) See "Cover Torque" on page 12 for re-assembly. Include any catalog number suffix marked on original part when ordering repair kit.

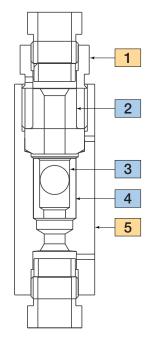



O-Ring Check Valves


Catalag	Fits	Pressure	Orifice	Rated	Cover		Dime	nsions - inches	(mm)	
Catalog Number	Connection Type	Rating psi (bar)*	inches (mm)	Cv	Torque ft.lb (Nm)	А	В	С	D Typical	Hex
CXO4400	SF250CX (1/4" MP)	20,000 (1379)	.125 (3.18)	.28	40 (54)	2.94 (74.68)	2.50 (63.50)	0.38 (9.53)	0.50 (13)	0.81 (20.57)
CXO6600	SF375CX (3/8" MP)	20,000 (1379)	.218 (5.54)	.84	65 (88)	3.12 (79.25)	2.62 (66.55)	0.47 (11.94)	0.62 (16)	1.00 (25.40)
CXO9900	SF562CX (9/16" MP)	20,000 (1379)	.359 (9.12)	2.30	140 (190)	4.18 (106.17)	3.50 (88.90)	0.53 (13.46)	0.94 (24)	1.38 (35.05)
CXO12	SF750CX (3/4" MP)	20,000 (1379)	.516 (13.11)	4.70	230 (312)	5.50 (139.70)	4.75 (120.65)	0.62 (15.75)	1.19 (330)	1.75 (44.45)
CXO16	SF1000CX (1" MP)	20,000 (1379)	.688 (17.48)	7.40	700 (950)	6.63 (168.40)	5.75 (146.05)	0.72 (18.29)	1.38 (35)	1.88++ (47.75)
CXO24	SF1500CX (1-1/2" MP)	15,000 (1034)	.938 (23.80)	14.00	1500 (2033)	9.01 (228.85)	7.25 (184.15)	1.12 (28.45)	1.88 (48)	3.00++ (76.20)

Ball Check Valves

	July Tuli	_								
CXB4400	SF250CX (1/4" MP)	20,000 (1379)	.125 (3.18)	.28	40 (54)	2.94 (74.68)	2.50 (63.50)	0.38 (9.53)	0.50 (13)	0.81 (20.57)
CXB6600	SF375CX (3/8" MP)	20,000 (1379)	.218 (5.54)	.84	65 (88)	3.12 (79.25)	2.62 (66.55)	0.47 (11.94)	0.62 (16)	1.00 (25.40)
CXB9900	SF562CX (9/16" MP)	20,000 (1379)	.359 (9.12)	2.30	140 (190)	4.18 (106.17)	3.50 (88.90)	0.53 (13.46)	0.94 (24)	1.38 (35.05)
CXB12	SF750CX (3/4" MP)	20,000 (1379)	.516 (13.11)	4.70	230 (312)	5.50 (139.70)	4.75 (120.65)	0.62 (15.75)	1.19 (330)	1.75 (44.45)
CXB16	SF1000CX (1" MP)	20,000 (1379)	.688 (17.48)	7.40	700 (950)	6.63 (168.40)	5.75 (146.05)	0.72 (18.29)	1.38 (35)	1.88++ (47.75)
CXB24	SF1500CX (1-1/2" MP)	15,000 (1034)	.938 (23.80)	14.00	1500 (2033)	9.01 (228.85)	7.25 (184.15)	1.12 (28.45)	1.88 (48)	3.00++ (76.20)

Ball Type Excess Flow Valves

CXK4402	SF250CX (1/4" MP)	20,000 (1379)	.125 (3.18)	.037+	40 (54)	2.94 (74.68)	2.50 (63.50)	0.38 (9.53)	0.50 (13)	0.81 (20.57)
CXK6602	SF375CX (3/8" MP)	20,000 (1379)	.218 (5.54)	.066+	65 (88)	3.12 (79.25)	2.62 (66.55)	0.47 (11.94)	0.62 (16)	1.00 (25.40)
CXK9902	SF562CX (9/16" MP)	20,000 (1379)	.359 (9.12)	.212+	140 (190)	4.18 (106.17)	3.50 (88.90)	0.53 (13.46)	0.94 (24)	1.38 (35.05)
CXK1202	SF750CX (3/4" MP)	20,000 (1379)	.516 (13.11)	.368+	230 (312)	5.12 (130.05)	4.38 (111.25)	0.62 (15.75)	1.19 (330)	1.75 (44.45)
CXK1602	SF1000CX (1" MP)	20,000 (1379)	.688 (17.48)	.864+	700 (950)	6.50 (165.10)	5.62 (142.75)	0.72 (18.29)	1.38 (35)	1.88++ (47.75)



Check and Excess Flow Valve Dimensions

NOTE: For optional material see Technical Brochure. Special material check valves are normally supplied with four flats in place of standard hex.

Note:

- + Check Flow water, GPM
- ++ Distance across flats

-Parke


Autoclave Engineers

^{*} Maximum pressure rating is based on the lowest rating of any component. Actual working pressure may be determined by tubing pressure rating, if lower. All dimensions for reference only and subject to change. For prompt service, Parker Autoclave stocks select products. Consult your local representative. To change material from standard 316SS, add material suffix (see Technical brochure for pressure reduction) after part number above. Please note: Only "wetted" material is changed, not collars and gland nuts. If needed, use additional suffix -AP (All Parts).




Line Filters

Medium Pressure - Pressures to 20,000 psi (1379 bar)



CLFX Series Dual Disc Line Filters

NOTE: Ordering Part Number can be found on Page 14



CXF Series Cup Type Line Filters

NOTE: Ordering Part Number can be found on Page 14

Dual-Disc Line Filters are utilized in numerous industrial, chemical processing, aerospace, nuclear and other applications. With the dual-disc design, large contaminant particles are trapped by the upstream filter element before they can reach and clog the smaller micron-size downstream element. Filter elements can be easily replaced.

Materials: Body, Cover, Gland Nut: CW 316 Stainless Steel.

Filter Element: 316L Stainless Steel, Sintered Disc Type. Downstream//upstream micron size 35/65 is standard, 5/10 or 10/35 also available when specified. Other element combinations available on special order.

High Flow Cup-Type Line Filters are recommended in medium pressure systems requiring both high flow rates and maximum filter surface area. Widely used in the industrial and chemical processing fields, the cup design offers as much as six times the effective filter area as compared to disc-type units. In addition, the filter elements can be quickly and easily replaced.

Materials: Body, Cover, Gland Nut: CW 316 Stainless Steel.

Filter Element: 316L Stainless Steel, Sintered Cup Type. Standard elements available in choice of 5, 35 or 65 micron sizes. Note: Filter ratings are nominal.

Temperature Range: Both Models:

Oxidizing Fluids: 750°F (400°C) maximum Non-Oxidizing Fluids: 900°F (480°C) -423°F (-252°C) minimum (See "Technical Brochure" for Pressure/Temperature effect on temperatures above ambient.)

Spare Parts: Filter Elements are only replaceable part with either filter type. See chart on page 14 for Filter Element part numbers.

NOTE 1: All filters furnished complete with connection components unless otherwise specified. All dimensions for reference only and subject to change. Limited special material options are available, consult factory for assistance.

NOTE 2: Parker Autoclave Engineers disc and cup type filters are designed to filter small amounts of process particles. It is recommended that all fluids are thoroughly cleaned prior to entering the higher pressure system.

NOTE 3: Special material filters may be supplied with four flats in place of standard hex.

NOTE 4: Pressure differential not to exceed 1,000 psi (69 bar) in a flowing condition. This is indication to replace filter.

NOTE 5: Larger micron size filter element is installed on the upstream (inlet) side.




Dual Disc Line Filters - Medium Pressure, 20,000 psi

Catalog	0	Orifice	Micron	Replacement	Cover	Effective	Dimensions - inches (mm)				
Catalog Number	Connection Size & Type	inches (mm)	Size** "um"	Filter P/N	Gland Torque	FilterArea in ² (mm ²)	А	В	С	D Typical	Hex
CLFX9900			35/65	65um = P-0764 35um = P-0794							
CLFX9900-5/10	SF562CX (9/16" MP)	.250 (6.35)	5/10	10um = P-1784 5um = P-1783	140 (190)	.25 (161.29)	4.94 (126.48)	2.68 (68.07)	0.53 (13.46)	0.94 (24)	1.38 (35)
CLFX9900-10/35			10/35	35um = P-0794 10um =P-1784							

Cup Type Line Filters - Medium Pressure, 20,000 psi

						•					
CXF4-5			5	201A-2916							
CXF4-35	SF250CX (1/4" MP)	.125 (3.18)	35	203A-2916	40 (55)	.81 (522.57)	2.94 (74.68)	2.50 (63.60)	0.38 (9.63)	0.50 (13)	0.81 (21)
CXF4-65	(1/4 1/11)	(0.10)	65	204A-2916	(00)	(===:01)	(14.00)	(00.00)	(5.55)	(10)	(21)
CXF6-5			5	201A-2916							1.00 (25)
CXF6-35	SF375CX (3/8" MP)	.218 (6.64)	35	203A-2916	65 (90)	.81 (522.57)	3.12 (79.26)	2.60 (66.55)	0.47 (11.99)	0.62 (16)	
CXF6-65	(6/6 1411)	(0.04)	65	204A-2916		(022.07)	(10.20)	(00.00)	(11.00)	(10)	
CXF9-5		.359 (9.12)	5	205A-2916	140 (190)	1.53 (987.09)	4.18 (106.17)	3.50 (88.90)	0.53 (13.46)		
CXF9-35	SF562CX (9/16" MP))		35	207A-2916						0.94 (24)	1.38 (35)
CXF9-65	(5/10 1411))		65	208A-2916							
CXF12-5			5	248A-2916							
	SF750CX (3/4" MP)	.516 (13.10)			600 (810)	2.65 (1709.67)	5.50 (139.70)	4.75 (120.66)	0.62 (15.75)	1.18 (38)	2.12 (53)
CXF12-65	(6, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1,	(10.10)	65	250A-2916	(010)	(1700.07)	(100.70)	(120.00)	(10.70)	(00)	(00)
CXF16-5			5	248A-2916	600 (810)	5.00 (3225.80)					2.12 (53)
	SF1000CX (1" MP)	.688 (17.48)					6.62 (168.15)	5.75 (146.05)	0.72 (18.29)	1.38 (35)	
CXF16-65	(, , , , ,	(17.40)	65	250A-2916						(33)	(30)

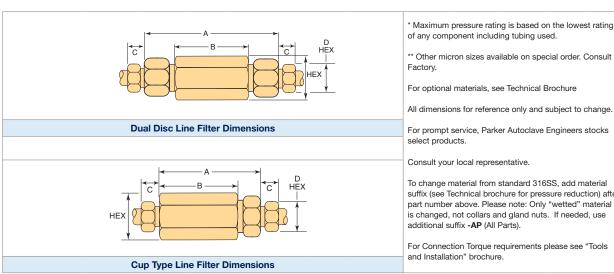

^{*} Maximum pressure rating is based on the lowest rating

suffix (see Technical brochure for pressure reduction) after part number above. Please note: Only "wetted" material is changed, not collars and gland nuts. If needed, use


 $^{^{\}star\star}$ Other micron sizes available on special order. Consult



Anti-Vibration Collet Gland Assembly

Medium Pressure - Pressures to 20,000 psi (1379 bar)



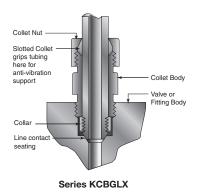

Series KCBGLX (sizes to 1-1/2" (38.10 mm)

For extreme conditions of vibration and/or shock in tubing systems, such as an unsupported line near a compressor, coned-and-threaded connections are offered with the Parker Autoclave anti-vibration collet gland assembly. Originally patented in 1968 the collet gland assembly is designed to be completely interchangeable with standard Parker Autoclave Engineers Medium Pressure gland connections, the collet gland assembly provides equally effective pressure handling capability.

In standard connection systems, the bending stresses on the threaded area of the tubing imposed by excessive vibration or movement may cause premature fatigue failure of the tubing at the back of the thread. By moving the stress concentration back to the unthreaded part of the tubing and providing a wedge-type gripping action, the Parker Autoclave Engineers anti-vibration collet gland assembly strengthens the entire structure while preventing rotation. With stress concentration reduced and overall stress level maintained well below the endurance limit of the material, the result is virtually unlimited vibrational fatigue life.

A less complex and more economical design than other vibration-resistant connections, the collet gland assembly utilizes the same coned-and-threaded features of Parker Autoclave Engineers medium pressure connections. Series KCBGLX extends the gland nut to provide room for the tapered slotted collet. The design provides a slight difference in angles between the collet and the corresponding taper of the gland nut. As the nut is tightened, it acts to wedge the tapered end of the collet into a gripping engagement with the tubing.

Material:

316 SS with bonded dry film molybdenum disulfide to help prevent galling. Additional thread lubricant not needed.

- 1) To order valve and fitting components with anti-vibration assemblies add -K to catalog numbers.
- 2) Special material assemblies are normally supplied with four flats in place of standard hex.
- 3) See Tools and Installation Catalog for Installation Instructions including Torque Specifications.



Anti-Vibration Collet Gland Assembly

Medium Pressure - Pressures to 20,000 psi (1379 bar)


Anti-Vibration Collet Gland Assembly Details:

Complete Assembly		Nominal Tubing	Dimensions: Inches (mm)					
Catalog Number	Part	Size Inches (mm)	А	В	Collet Nut Hex	Body Hex		
KCBGLX40-316MC	Complete Assembly	1/4"	0.94 (23.88)	1.19 (30.23)	5/8"	1/2"		
KCBGLX60-316MC	Complete Assembly	3/8"	1.19 (30.23)	1.50 (38.10)	13/16"	5/8"		
KCBGLX90-316MC	Complete Assembly	9/16"	1.41 (35.81)	1.78 (45.21)	15/16"	15/16"		
KCBGLX120-316MC	Complete Assembly	3/4"	1.59 (40.37)	2.00 (50.80)	1-3/8"	1-3/16"		
KCBGLX160-316MC	Complete Assembly	1"	1.69 (42.93)	2.38 (60.45)	1-1/2"	1-3/8"		
KCBGLX240-316MC	Complete Assembly	1-1/2"	2.75 (69.85)	3.63 (92.20)	2-1/4"	1-7/8"		

All dimensions for reference only and subject to change.

For prompt service, Parker Autoclave Engineers stocks select products. Consult your local representative.

Antivibration Gland assemblies made with any optional material will be coated with dry film molybdenum disulfide to help prevent galling. See Tools and Installation brochure for reduced torque ratings.

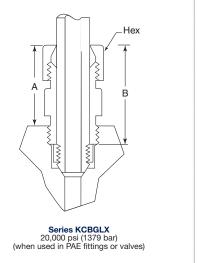

Standard Parker Autocalve Engineers collar not included in Antivibration Gland Assembly if ordered separately.

Always use back-up wrench on collet body when tightening collet nut to prevent over-torquing connection.

-Parker


Autoclave Engineers



Assembly Instructions

Medium Pressure Fittings - Pressures to 20,000 psi (1379 bar)

Medium Pressure Connection: Step by Step Assembly Instructions

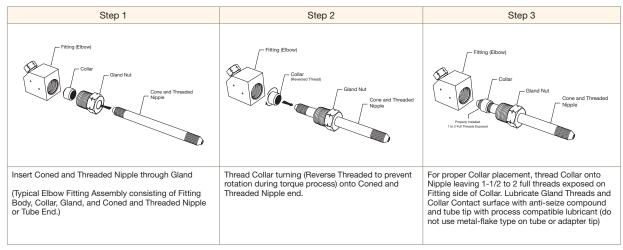

Step 4	Step 5	Medium Pressu	re Gland Torque
_— Fitting (Elbow)	Fitting (Elbow)		2507 Super Duplex Adapters
	Torque Wrench	Fitting Size	Required Torque ft-lb (N.m)
		1/4" MP	20 (27)
		3/8" MP	30 (41)
		9/16" MP-15Ksi	55 (75)
		9/16" MP-20Ksi	55 (75)
		3/4" MP-15Ksi	75 (102)
	/ 8	3/4" MP-20Ksi	90 (122)
Insert Tube/Gland assembly into Fitting body, turning	Use Torque Wrench to properly set (see chart in next	1" MP-15Ksi	135 (187)
clockwise approximately 4-5 threads (if unable to turn full distance by hand, look for misalignment issues with	frame) Cone & Thread Connections. (Available with wrench adapters in Tools and Installation brochure)	1" MP-20Ksi	135 (187)
tubing and correct for proper seal).	wienen adapters in 100is and installation brochure)	1-1/2" MP	200 (272)
		Torque for optional mate than maxim	rials and pressures lower num (above)



NOTES:			







High Pressure Valves • Fittings • Tubing to 150,000 psi.



Reactors • Vessels Instrumentation



Air Driven, High Flow, High Pressure Liquid Pumps

THIS IS PARKER

Parker Autoclave



Parker's Motion & Control Technologies

At Parker, we're guided by a relentless drive to help our customers become more productive and achieve higher levels of profitability by engineering the best systems for their requirements. It means looking at customer applications from many angles to find new ways to create value. Whatever the motion and control technology need, Parker has the experience, breadth of product and global reach to consistently deliver. No company knows more about motion and control technology than Parker. For further information call 1-800-C-Parker.

MA	RKET	KEY MA	RKETS	KEY PR	ODUCTS
~		Aircraft Engines Commercial Commerical Transports	Business and General Aviation Land-Based Weapons Systems	Flight Control Systems & Components Fluid Conveyance Systems Fluid Metering Delivery & Atomization	Hydraulic Systems & Components Inert Nitrogen Generating Systems Pneumatic Systems & Components
	AEROSPACE	Military Aircraft Regional Transports	Missiles and Launch Vehicles Unmanned Aerial Vehicles	Devices Fuel Systems & Components	Wheels & Brakes
	CLIMATE CONTROL	Agriculture Food, Beverage and Dairy Precision Cooling Transportation	Air Conditioning Life Sciences & Medical Processing	Co2 Controls Electronic Controllers Filter Driers Hand Shut-Off Valves Hose & Fittings	Pressure Regulating Valves Refrigerant Distributors Safety Relief Valves Solenoid Valves Thermostatic Expansion Valves
	ELECTRO- MECHANICAL	Aerospace Life Science & Medical Packaging Machinery Plastics Machinery & Converting Semiconductor & Electronics Factory Automation	Machine Tools Paper Machinery Primary Metals Textile Wire & Cable	AC/DC Drives & Systems Electric Actuators, Gantry Robots & Slides Electrohydrostatic Actuation Systems Electromechanical Actuation Systems Human Machine Interface	Linear Motors Stepper Motors, Servo Motors Drives & Controls Structural Extrusions
UCCAME	FILTRATION	Food & Beverage Life Sciences Mobile Equipment Power Generation Transportation	Industrial Machinery Marine Oil & Gas Process	Analytical Gas Generators Compressed Air & Gas Filters Condition Monitoring Engine Air, Fuel & Oil Filtration & Systems	Hydraulic, Lubrication & Coolant Filters Process, Chemical, Water Microfiltration Filters Nitrogen, Hydrogen & Zero Air Generators
	FLUID and GAS HANDLING	Aerospace Agriculture Bulk Chemical Handling Construction Machinery Food & Beverage Fuel & Gas Delivery	Industrial Machinery Mobile Oil & Gas Transportation Welding	Brass Fittings & Valves Diagnostic Equipment Fluid Conveyance Systems Industrial Hose	PTFE & PFA Hose, Tubing & Plastic Fittings Rubber & Thermoplastic Hose & Couplings Tube Fittings & Adapters Quick Disconnects
	HYDRAULICS	Aerospace Aerial lift Agriculture Construction Machinery Forestry	Industrial Machinery Mining Oil & Gas Power Generation & Energy Truck Hydraulics	Diagnostic Equipment Hydraulic Cylinders & Accumulators Hydraulic Motors & Pumps Hydraulic Systems Hydraulic Valves & Controls	Power Take-Offs Rubber & Thermoplastic Hose & Couplings Tube Fittings & Adapters Quick Disconnects
	PNEUMATICS	Aerospace Conveyor & Material Handling Factory Automation Life Science & Medical	Machine Tools Packaging Machinery Transportation & Automotive	Air Preparation Brass Fittings & Valves Manifolds Pneumatic Accessories Pneumatic Actuators & Grippers Pneumatic Valves & Controls	Quick Disconnects Rotary Actuators Rubber & Thermoplastic Hose & Couplings Structural Extrusions Thermoplastic Tubing & Fittings Vacuum Generators, Cups & Sensors
	PROCESS CONTROL	Chemical & Refining Food, Beverage & Dairy Medical & Dental	Microelectronics Oil & Gas Power Generation	Analytical Sample Conditioning Products & Systems Fluoropolymer Chemical Delivery Fittings, Valves & Pumps High Purity Gas Delivery Fittings, & Valves & Regulators	Instrumentation Fittings, Valves Regulators Medium Pressure Fittings & Valves Process Control Manifolds
	SEALING and SHIELDING	Aerospace Chemical Processing Consumer Energy, Oil & Gas Fluid Power General Industrial	Information Technology Life Sciences Military Semiconductor Transportation	Dynamic Seals Elastomeric O-Riings Emi Shielding Extruded & Precision-Cut, Fabricated Elastomeric Seals	Homogeneous & Inserted Elastomeric Shapes High Temperature Metal Seals Metal & Plastic Retained Composite Seals Thermal Management

--Parker

Autoclave 🍪 Engineers



Parker Worldwide

North America

USA - Corporate, Cleveland, OH Tel: +1 256 896 3000

USA - IPD, Huntsville, AL Tel: +1 256 881 2040 ipdcct@parker.com

USA – IPD, (Autoclave), Erie, PA Tel: +1 814 860 5700 ipdaecct@parker.com

CA - Canada, Grimsby, Ontario Tel +1 905-945-2274 ipd canada@parker.com

South America

AR - Argentina, Buenos Aires Tel: +54 3327 44 4129 falecom@parker.com

BR - Brazil, Diadema, SP Diadema, SP Tel: +55 11 4360 6700 falecom@parker.com

CL - Chile, Santiago Tel: +56 (0) 2 2303 9640 falecom@parker.com

MX - Mexico, Toluca Tel: +52 722 275 4200 contacto@parker.com

Asia Pacific

AU - Australia, Dandenong Tel: +61 (0)2 9842 5150 customer.service.au@parker.com

CN - China, Shanghai Tel: +86 21 2899 5000 INGtechnical.china@parker.com

HK - Hong Kong Tel: +852 2428 8008

IN - India, Mumbai Tel: +91 22 6513 7081-85

ID - Indonesia, Tangerang Tel: +62 2977 7900 parker.id@parker.com

Tel: +(81) 3 6365 4020 infophj@parker.com

KR - South Korea, Seoul Tel: +82 2 559 0400 parkerkr@parker.com

MY - Malaysia, Selangor Tel: +603 784 90 800 parkermy@parker.com

SG - Singapore Tel: +65 6887 6300 parkersg@parker.com

TH - Thailand, Bangkok Tel: +66 2 186 7000 phthailand@parker.com

TW - Taiwan, Taipei Tel: +886 2 2298 8987 enquiry.taiwan@parker.com

VN - Vietnam, Hochi Minh City Tel: +848 382 508 56 parker_viet@parker.com

Europe, Middle East, Africa

AE - UAE, Duba Tel: +971 4 812 7100 parker.me@parker.com

AT - Austria, Wiener Neustadt Tel: +43 (0)2622 23501-0 parker.austria@parker.com

AT - Eastern Europe, Wiener Neustadt Tel: +43 (0)2622 23501 900 parker.easteurope@parker.com

AZ - Azerbaijan, Baku Tel: +994 50 2233 458 parker.azerbaijan@parker.com

BE/LU - Belgium, Nivelles Tel: +32 (0)67 280 900 parker.belgium@parker.com

BG - Bulgaria, Sofia Tel: +359 2 980 1344 parker.bulgaria@parker.com

BY - Belarus, Minsk Tel: +48 (0)22 573 24 00 parker.belarus@parker.com

CH - Switzerland, Etov Tel: +41 (0) 21 821 87 00 parker.switzerland@parker.com

CZ - Czech Republic, Klecany Tel: +420 284 083 111 parker.czechrepublic@parker.com

DE - Germany, Kaarst Tel: +49 (0)2131 4016 0 parker.germany@parker.com

DK - Denmark, Ballerup Tel: +45 43 56 04 00 parker.denmark@parker.com ES - Spain, Madrid Tel: +34 902 33 00 01 parker.spain@parker.com

FI - Finland, Vanta Tel: +358 (0)20 753 2500 parker.finland@parker.com

FR - France, Contamine s/Arve Tel: +33 (0)4 50 25 80 25 parker.france@parker.com

Tel: +30 210 933 6450 parker.greece@parker.com

HU - Hungary, Budapest Tel: +36 223 885 470 parker.hungary@parker.com

IE - Ireland, Dublin Tel: +353 (0)1 466 6370 parker.ireland@parker.com

IT - Italy, Corsico (MI) Tel: +39 02 45 19 21 parker.italy@parker.com

KZ - Kazakhstan, Almaty Tel: +7 7273 561 000 parker.easteurope@parker.com

NL - The Netherlands, Oldenzaal Tel: +31 (0)541 585 000 parker.nl@parker.com

NO - Norway, Stavanger Tel: +47 66 75 34 00 parker.norway@parker.com

PL - Poland, Warsaw Tel: +48 (0)22 573 24 00 parker.poland@parker.com PT - Portugal, Leca da Palmeira Tel: +351 22 999 7360 parker.portugal@parker.com

RO - Romania, Bucharest Tel: +40 21 252 1382 parker.romania@parker.com

RU - Russia, Moscow Tel: +7 495 645-2156 parker.russia@parker.com

Tel: +46 (0)8 59 79 50 00 parker.sweden@parker.com

SK - Slovakia, Banská Bystrica Tel: +421 484 162 252 parker.slovakia@parker.com

SL - Slovenia, Novo Mesto Tel: +386 7 337 6650 parker.slovenia@parker.com

TR - Turkey, Istanbul Tel: +90 216 4997081 parker.turkey@parker.com

UA - Ukraine Kiev Tel: +48 (0)22 573 24 00 parker.ukraine@parker.com

UK - United Kingdom, Warwick Tel: +44 (0)1926 317 878 parker.uk@parker.com

ZA - South Africa, Kempton Park Tel: +27 (0)11 961 0700 parker.southafrica@parker.com

! CAUTION!

Do not mix or interchange component parts or tubing with those of other manufacturers. Doing so is unsafe and will void warranty.

Parker Autoclave Engineers Valves, Fittings, and Tools are not designed to interface with common commercial instrument tubing and are designed to only connect with tubing manufactured to Parker Autoclave Engineers AES specifications. Failure to do so is unsafe and will void warranty.

WARNING

FAILURE, IMPROPER SELECTION OR IMPROPER USE OF THE PRODUCTS AND/OR SYSTEMS DESCRIBED HEREIN OR RELATED ITEMS CAN CAUSE DEATH, PERSONAL INJURY AND PROPERTY DAMAGE.

This document and other information from Parker Hannifin Corporation, its subsidiaries and authorized distributors provide product and/or system options for further investigation by users having technical expertise. It is important that you analyze all aspects of your application and review the information concerning the product or system in the current product catalog. Due to the variety of operating conditions and applications for these products or systems, the user, through its own analysis and testing; is solely responsible for making the final selection of the production of systems and systems and assuring that all performance, safety and warning requirements of the application are met. The products described herein, including without limitation, product features, specifications, designs, availability and pricing, are subject to change by Parker Hannifin Corporation and its subsidiaries at any time without notice.

Offer of Sale

The items described in this document are available for sale by Parker Hannifin Corporation, its subsidiaries or its authorized distributors. Any sale contract entered by Parker will be governed by the provisions stated in Parker's standard terms and conditions of sale (copy available upon request).

©2021 Parker Hannifin Corporation | Autoclave Engineers is a registered trademark of the Parker Hannifin Corporation

Division Headquarters

Instrumentation Products Division

Literature #: 02-0124SE

May 2021





Instrumentation Products Division Autoclave Engineers Operation 8325 Hessinger Drive Erie, PA 16509-4679 Tel: 814 860 5700 Fax: 814 860 5811 www.autoclave.com

www.parker.com/ipd ISO-9001 Certified

1005 A Cleaner Way Huntsville, AL 35805 USA Tel: 256 881 2040 Fax: 256 881 5072

Parker Hannifin Manufacturing Ltd. Instrumentation Products Division, Europe Riverside Road Pottington Business Park Barnstaple, UK, EX31 1NP, UK Tel: 44 1271 313131

Fax: 44 1271 373636

Fittings and Tubing: Medium Pressure 02-0124SE 0521

Tel: +45 63 12 83 00 | Email: ps@hymatik.com | www.hymatik.com | Hvidkaervej 27a, DK-5250 Odense SV, Denmark